




715 7th Street • Chipley, FL 32428
(800) 874-7861 toll-free • info@ezyglide.com

EZY-STIK[®] STEERING SETUP



CORRECT POSITION OF TRIM TAB

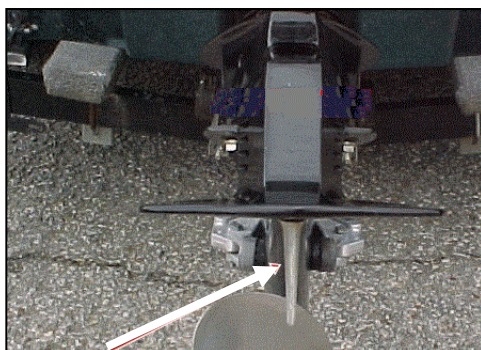

INCORRECT POSITION OF TRIM TAB





MAKE SURE FRICTION SCREW IS LOOSE

Position Trim Tab as shown. Tab should be rotated 20 degrees counter-clockwise. Loosen tab bolt, rotate tab to the right, and retighten bolt.

Install link arm to the outer connecting point as shown. (60hp Mercury 4-stroke engine shown)



Link arm should be connected to the outer connecting point.

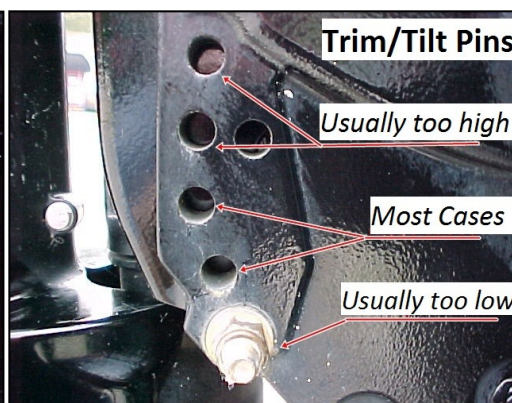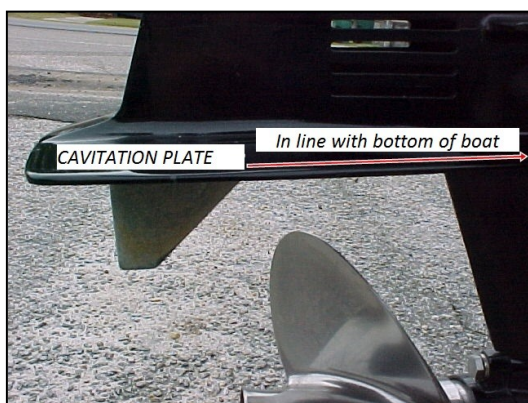

Motor Height:

(You may need dealer assistance)

The Cavitation Plate on the outboard should be nearly level with the running pad of the boat.

Check steering equipment regularly! The control lever is manufactured as a straight control lever. DO NOT attempt to re-design, re-fabricate or bend control lever. If your lever becomes bent, replace it.

DO NOT Grease output ram! Grease will work its way into the core section of the cable and over a period of time will dry out and your cable will become stiff. ***We recommend using ONLY "80 Below" Brand lubrication products. Contact us for more information.***

Always wear a personal flotation device. Always connect kill-switch before starting engine.

FOR ASSISTANCE CALL EZY-GLIDE, INC. (800) 874-7861

7/2019